

Thermocouple Testing & Tool Kit

Testing & replacement of thermocouples made easy!



Instructions:

1. Unscrew the existing thermocouple from the control unit of the appliance.
2. Fit the end of the thermocouple into the tester. If using the universal bush provided, gently flatten a section of the thermocouple tube to slip the bush on.
3. Light the pilot using the normal method for the appliance.
4. While continuing to hold down the appliance button, depress the spring on the tester fully and hold for 20 seconds.
5. Release pressure on the tester spring only, while still holding down the appliance button.

Test Results:

If the tester spring remains closed, the thermocouple is working and supplying power to the electromagnet.

If the spring releases while the pilot light is still on, the thermocouple is faulty and should be replaced.